 


GRECO 16
GRECO 16 ELEGANCE
GRECO 16CR ELEGANCE
GRECO 16CR PURE

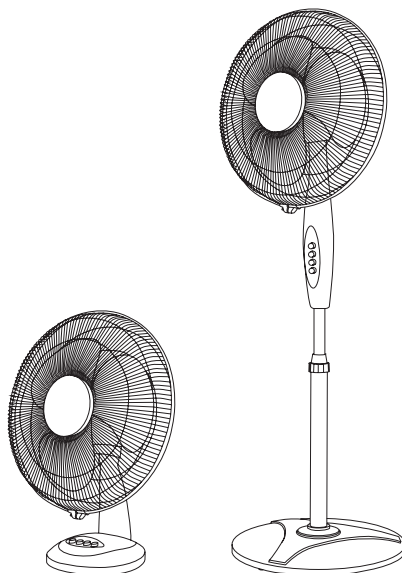 


ES. Instrucciones de uso
EN. Instructions for use
FR. Mode d'emploi
PT. Instruções de uso
IT. Istruzioni per l'uso
CA. Instruccions d'ús
DE. Gebrauchsanleitun
NL. Gebruiksaanwijzing
RO. Instrucțiuni de utilizare
PL. Instrukcja obsługi

BG. Инструкция за употреба
EL. Οδηγίες χρήσης
RU. Инструкция по применению
DA. Brugsanvisning
NO. Instruksjoner for bruk
SV. Användningsinstruktioner
FI. Käyttöohjeet
TR. Kullanım için talimatlar
HE. הוראות לשימוש
AR. تعليمات الاستخدام

taurus

GRECO 16
GRECO 16 ELEGANCE

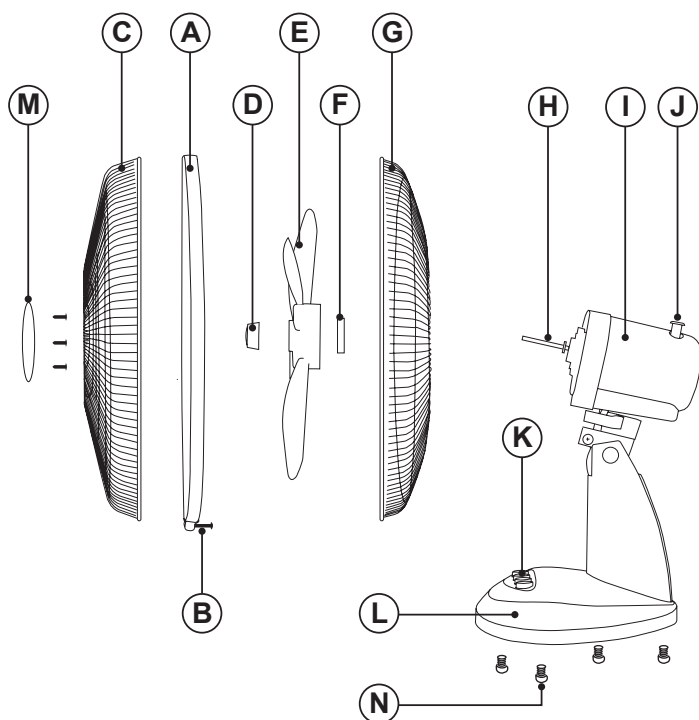

GRECO 16CR ELEGANCE
GRECO 16CR PURE

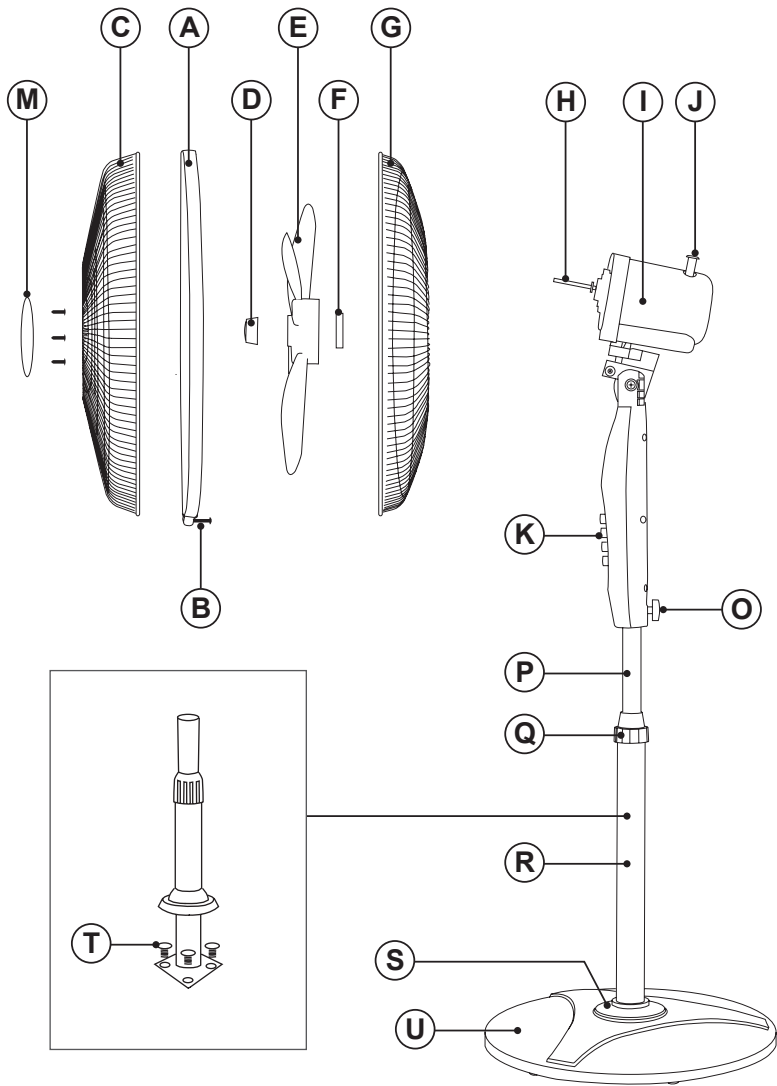 


Fig.1

 
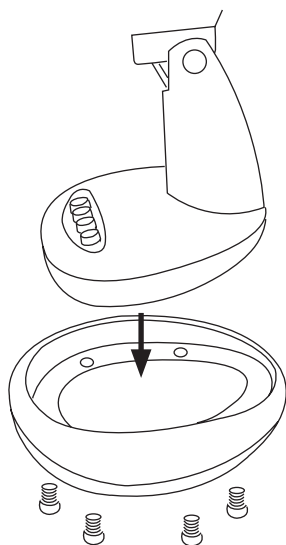 


Fig.2

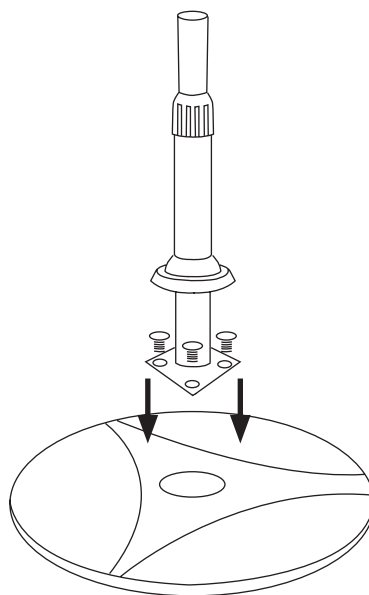

FAN**GRECO 16****GRECO 16 ELEGANCE****GRECO 16CR ELEGANCE****GRECO 16CR PURE****DESCRIPTION**

- A Fixing Belt
- B Security screw
- C Front Grill
- D Propeller Nut
- E Propeller
- F Rear grill nut
- G Rear grill
- H Motor shaft
- I Motor housing
- J Oscillation knob
- K Speed selection buttons
- L Desk fan base
- M Front grill center cover
- N Non-slip feet
- O Upper lock nut (*)
- P Inner Pipe (*) (**)
- Q Adjustable pipe knob (*)
- R Base pipe (*)
- S Base (*)
- T Screws for the base (*)
- U Round base (*)

(*) Only available in the models GRECO 16CR ELEGANCE / GRECO 16CR PURE.

(**) If you do not see this part, ensure it is not located inside the base pipe before contacting our technical service. Remove it carefully to avoid any damage. If the model of your appliance does not have the accessories described above, they can also be bought separately from the Technical Assistance Service.

USE AND CARE

- Fully extend the appliance's supply cord before each use.
- Do not use the appliance if its accessories are not properly fitted.
- Do not use the appliance if the accessories attached to it are defective. Replace them immediately.

- Do not use the appliance if the speed selection buttons do not work.
- Do not move the appliance while in use.
- Do not use the appliance if it is tipped up and do not turn it over.
- Do not turn the appliance over while it is in use or connected to the mains.
- Disconnect the appliance from the mains when not in use and before undertaking any cleaning task.
- Keep the appliance in a dry, dust-free place, out of direct sunlight.
- Make sure that dust, dirt or other foreign objects do not block the fan grill on the appliance.
- Keep the appliance in good condition. Check that the moving parts are not misaligned or jammed and make sure there are no broken parts or anomalies that may prevent the appliance from operating correctly.
- Never leave the appliance connected and unattended if is not in use. This saves energy and prolongs the life of the appliance.
- Do not use the appliance to dry pets or animals.
- Do not use the appliance to dry textiles of any kind.

INSTALLATION

- Be sure to remove all packing material from inside the appliance.
- Ensure that the fan is disconnected from the mains supply before starting any installation or assembly work.
- Do not remove the support feet or the base of the appliance.
- Ensure that the appliance is level with the floor.
- Do not cover or obstruct any openings on the appliance.
- The plug must be easily accessible so that it can be disconnected in an emergency.
- The appliance should be used with the base in place.

ASSEMBLING THE TABLE FAN BASE

- To fix the base to the appliance, place the appliance face down.
- Fit the base onto the main body and secure with the screws provided (Fig.1).
- Stand the appliance upright to check that the base is working properly.

ASSEMBLING THE FLOOR FAN BASE

- Fit the base with the base pipe and secure it with the screws provided. (Fig.2)

- Fit the inner pipe on the main body of the appliance and fix it.
- Stand the appliance up so as to check that the base works properly.

ASSEMBLING THE GRILL AND THE PROPELLER

- Remove the rear grill nut and the propeller nut from the motor shaft if they are attached to it when removing the appliance from its packaging.
- Fit the rear grill on the motor housing, matching their fitting points.
- Tight the rear grill nut that attaches the grill and make sure of a correct setting.
- Fit the propeller on the motor shaft in its right position.
- Tight the propeller nut that attaches the propeller and make sure of a correct setting.
- Match the front grill front the rear grill.
- Secure the grilles by placing their fixing strap around them and tighten the securing screw using a screwdriver.
- Check the correct rotation of the propeller.

INSTRUCTIONS FOR USE

BEFORE USE

- Make sure that all product's packaging has been removed.
- Please read carefully the "Safety advice and warnings" booklet before first use
- Prepare the appliance according to the function you wish to use:

USE

- Extend the supply cord completely before plugging it in.
- Attach the appliance to its base making sure that it is correctly fitted into place.
- Connect the appliance to the mains.
- Guide the appliance to direct the flow of air in the desired direction.
- Turn the appliance on, by using one of the speed selection buttons.
- Select the desired speed.

FAN FUNCTION

- Select the fan position.
- Select the desired ventilation speed.

OSCILLATION FUNCTION

- The oscillation function makes it possible to direct the flow from the apparatus so that it automatically alternates over a range of 75°.
- To activate this function, push down the oscillation knob.
- To deactivate this function, pull up the oscillation knob.

HEIGHT ADJUSTMENT

- The height of the appliance can be adjusted by unlocking the adjustable pipe knob, placing the appliance at the desired height and locking the knob again.

ONCE YOU HAVE FINISHED USING THE APPLIANCE

- Stop the appliance, selecting position 0 on the speed selector control.
- Unplug the appliance from the mains.
- Clean the appliance.

CARRY HANDLE(S)

- This appliance has a handle on the back to make it easy and convenient to transport

CLEANING

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not let water or any other liquid get into the air vents to avoid damage to the inner parts of the appliance.
- Never immerse the appliance in water or any other liquid or place it under running water.
- If the appliance is not kept in a good state of cleanliness, its surface may deteriorate and this will inevitably affect the life of the appliance and make it unsafe to use.