


taurus

WHITE & BROWN


DARKFIRE DOMINO

Placa de inducción portátil
Portable induction plate
Plaque à induction portable
Induktionskochplatte
Piastra a induzione
Placa de indução portátil
Placa d'inducció portàtil
Inductie fornuis
Płyty indukcyjna
Επαγωγική πλάκα
Индукционная плита
Placa a Inductie
Индукционна плоча

طباخ الحث

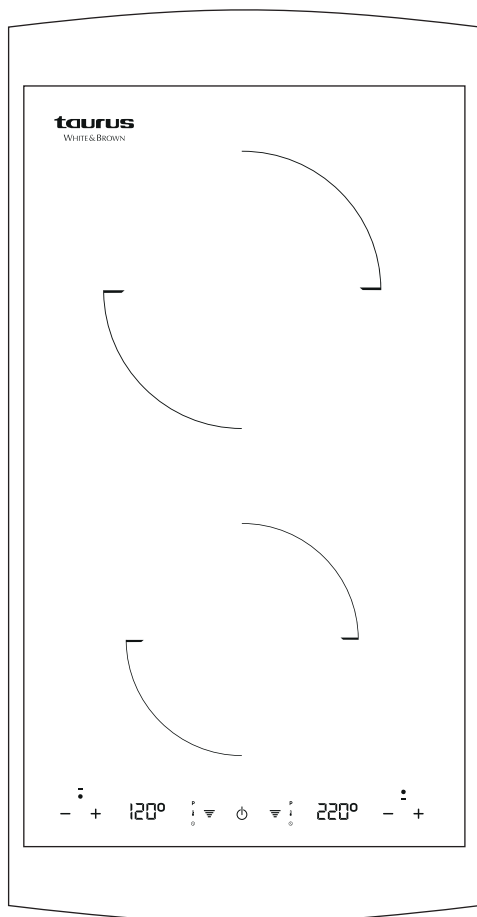



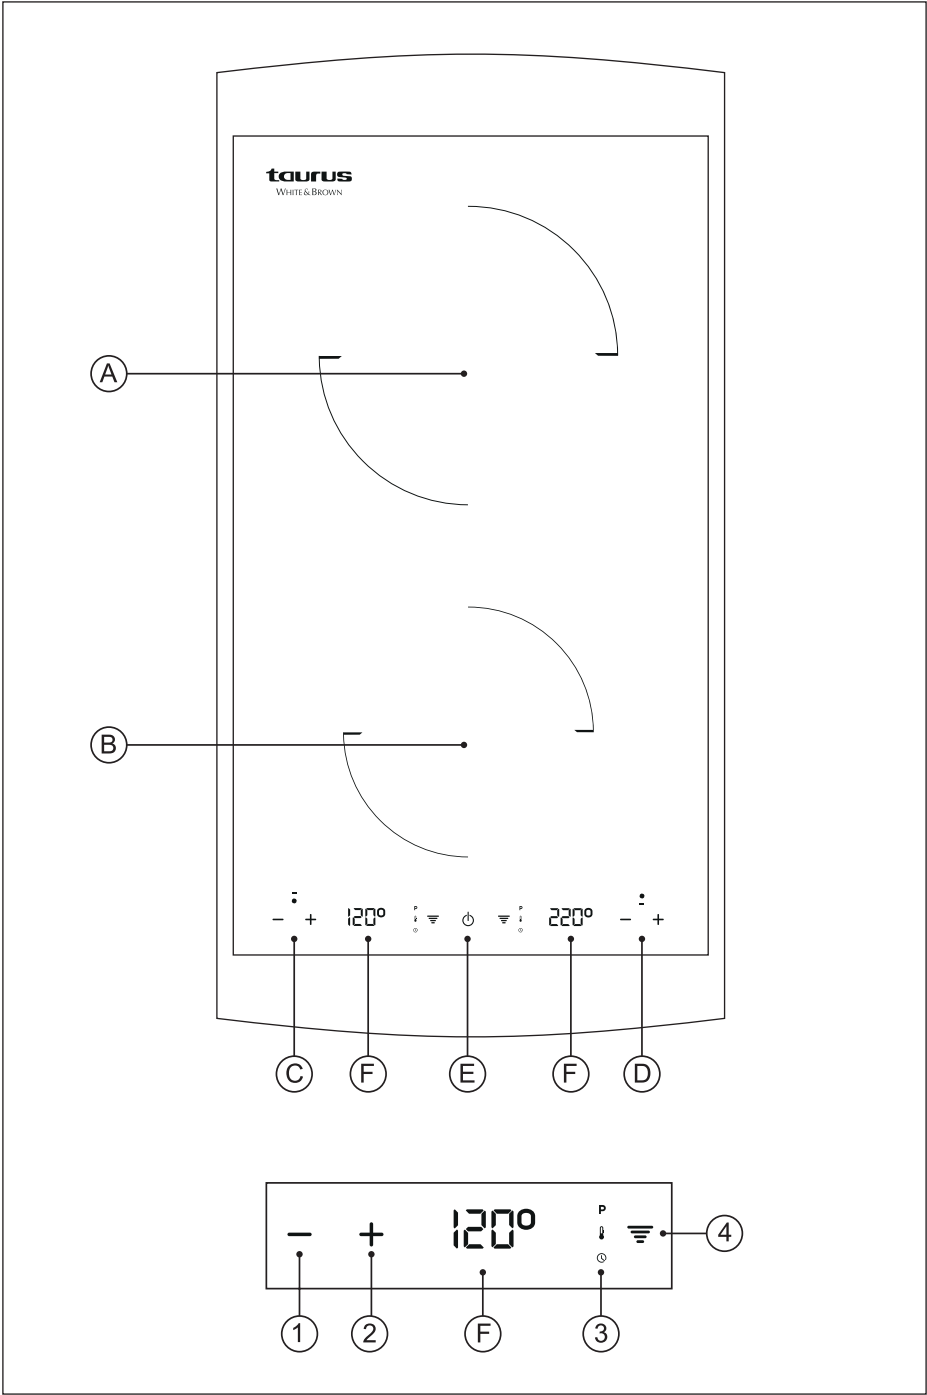

English

Portable induction plate Darkfire Domino

DESCRIPTION

A	Upper hob of Ø19 cm.
B	Bottom hob of Ø15 cm
C	Below hob controls
D	Upper hob controls
E	On/Off button
F	LCD screens

- | | |
|---|-----------------------|
| 1 | - button |
| 2 | + button |
| 3 | Function indicator |
| 4 | Mode / plate selector |

- If the model of your appliance does not have the accessories described above, they can also be bought separately from the Technical Assistance Service.

PRACTICAL RECOMMENDATIONS:

- Use cookware suitable for the size of the hotplate.
- Do not use excess water to cook foods. The more water used; the more energy needed.
- Whenever possible use a pressure cooker, it saves time and energy.
- Switch the hotplates on only when the cookware is ready and switch them off before removing it.
- Cookware must be flat.
- Use cookware suitable for the amount being cooked. Large pots used for small amounts increase power consumption.
- Cooking without using the lid for the cookware increases power consumption.

USE AND CARE:

- Fully extend the appliance's power cable before each use.
- Do not move the appliance while in use.
- Do not turn the appliance over while it is in use or connected to the mains.
- Disconnect the appliance from the mains when

not in use and before undertaking any cleaning task.

- Store this appliance out of reach of children and/or persons with physical, sensory or reduced mental or lack of experience and knowledge.
- Do not store the appliance if it is still hot.
- Never leave the appliance connected and unattended if it is not in use. This saves energy and prolongs the life of the appliance.

INSTALLATION

- Be sure to remove all packaging material from inside the appliance.
- Do not remove the support feet of the appliance.
- Do not cover or obstruct any of the openings of the appliance.
- The plug must be easily accessible so it can be disconnected in an emergency.
- The appliance should be used with its base feet fitted.

INSTRUCTIONS FOR USE

BEFORE USE:

- Make sure that all products' packaging has been removed.

USE:

- Extend the cable completely before plugging it in.
- Connect the appliance to the mains. The appliance will access to electricity and left display will be enlightened.
- Place the piece of cookware that you want to use on the hob.
- ATTENTION: Please check whether your cookware is compatible with the induction cooking method.
- Turn the appliance on, by using the on/off button.
- ATTENTION: Use the left controls to program and use the bottom hob and the right ones to control the upper hob.

FUNCTION

- Select the hob you want to use:
- Press the Mode Selector (4) on the side you

want to program for 2s. The hob will start working.

POWER SELECTION FUNCTION

- Once pressed the mode selector, this mode will be applied, and a LED light next to the LED screen will indicate the mode "P" has been activated.
- Press the buttons +/- to change the power selected. This function has 10 power levels.
- Small hob: 120, 300, 500, 700, 800, 900, 1000, 1100, 1200, 1300 W
- Big hob: 120, 300, 500, 1000, 1100, 1200, 1300, 1400, 1500, 1600 W.

TEMPERATURE SELECTION FUNCTION

- Once you opened the appliance, press 3 time the mode selector button. The °C symbol next to the screen will be indicated.
- Press the buttons +/- to select the temperature you desire. Both hobs have 10 levels of temperature: 60 °C, 80 °C, 100 °C, 120 °C, 140 °C, 160 °C, 180 °C, 200 °C, 220 °C, 240 °C.

TIMER FUNCTION

- In both, temperature and power modes, if you push on the button of the function selector, and you will go to the timer function, where you will be able to schedule a switch off time between 0:01 and 3:00.
- In order to confirm the time, just leave it during 5 seconds, and it will emit a sound.
- To cancel this function, switch off the induction plate or stop of the operation on the hob that time has been scheduled.

ONCE YOU HAVE FINISHED USING THE APPLIANCE:

- Turn the appliance off, using the on/off switch.
- Unplug the appliance from the mains.
- Clean the appliance.

ERROR CODES

- The following messages can appear on the screen:
- E0 → no pot or not detected.
- E1 → Don't reach minimum voltage
- E2 → Too much Voltage for the plate.
- E3 → Thermostat open

- E4 → Thermostat broke
- E5 → Overheating protection
- E6 → Power tube overheating protection
- E7 → Surface sensor failure

CLEANING

- Disconnect the appliance from the mains and allow it to cool before undertaking any cleaning task.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Never submerge the appliance in water or any other liquid or place it under running water.
- If the appliance is not in good condition of cleanliness, its surface may degrade and inexorably affect the duration of the appliance's useful life and could become unsafe to use.

SPECIAL MESSAGES

PROBLEM	CHECK	IF CHECKING IS POSITIVE
Once connected and pushed the button on/off the appliance doesn't come on	There's a voltage drop	Wait until the service is resumed
	There's a problem inside the appliance?	Take your appliance to the closest Technical Assistance Service
	It is plugged firmly to the AC outlet?	
The heating is broken during the use and you can hear a "Beep"	The cooking accessories are able to go on induction?	If not, replace them for ones that can. Always use induction capable accessories
	Is the accessory centered?	Center the accessory to the induction plate
	Have you moved the accessory several times?	Probably the system has shut down the appliance automatically. Press the On/Off button