

Dear Customer, If you follow the recommendations contained in this Instruction Manual, our appliance will give you constant high performance and will remain efficient for many years to come. Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

## SAFETY INSTRUCTIONS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
6. Never pull on the cord when unplugging.
7. Do not use the unit with a damaged cord or plug, or if it is not working properly.

8. Do not handle the appliance with wet hands.
  9. Never immerse the appliance in water or any other liquid.
  10. Make sure the appliance has been unplugged before cleaning.
  11. This appliance must be installed following the national regulations for electrical installations.
  12. This appliance is for household use only.
  13. In case that you need a copy of the instruction manual, you can find it in [www.orbegozo.com](http://www.orbegozo.com).
  14. **WARNING:** In case of misuse, there is a risk of possible injury.
- Never insert fingers, pencils or any other object through the grille when fan is running.
  - Disconnect the plug when moving from one location to another.
  - Disconnect plug when removing guards for cleaning.
  - Be sure fan is on a stable, even surface when operating to avoid overturning.
  - **DO NOT USE** fan in window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has been collected to avoid the potential of electrical hazard.
  - Do not operate this product near an open fire, it may ignite and cause fire, resulting in body injury or property damage.

- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Never attempt to disassemble or alter the product in any way not instructed by this manual. Shock, fire, or bodily injury may occur.
- Do not cover or restrict airflow to the inlet or exhaust grills in any manner as the appliance may over heat and become a fire risk.
- Keep all objects at least 1.5 meter from the front, sides and rear of the appliance.

## FUNCTIONS

1. Refrigeration / Humidification: This appliance can be used as humidifier, used with the ice tray, this appliance can refresh the ambience.
2. Adjustable speed: have three speed, low, medium, high.
3. Swing function: the slats swing automatically, delivering wind at wide angle flatly. Also swing the slats transversely by your hands, choosing the wind direction up and down.
4. Removable air filter and cooling pad: easy to clean, can use soft brush and detergent.

## ASSEMBLING

1. Open the package and take out the air cooler.
2. Draw out the water tank 1/2, pour clean water into the tank.
  - ① Please pay attention to the water level.
  - ② Pour into the water over min level "3" but no more than max Level "8".
  - ③ To en-have the cooling effect, you can put the ice box into the tank, previously frozen.

Attention: cut the power when you pour the water into the tank. You should change the water of the tank each 15 days.

## OPERATION

Plug the device into the mains

1. Speed Buttons: Press the speed you want 1, 2 or 3.
2. Swing button: press "SWING" button, the air direction swings horizontally. Pressing it again stops this function.

You can also rotate the blades crosswise with your hands, choose the air stream up and down.

3. Humidification button: press the "COOL" button to make it start to work. If you add the cold packs, the temperature of the air outlet vent can drop up to 3°C below the ambient temperature after a few minutes. If you press the button again, this function stops.
4. Off button: if you are not going to use the appliance, press the "0" button.

## THE USE OF ICE BOX

The ice crystal has a particular feature of keeping cool; it can absorb heat from water and let the water temperature in the water tank below environmental temperature, so the air will be much cooler.

Using methods:

- a) Turn the flange and remove the water tank. Add water to the ICE BOX under not full situation and put it into the refrigerating chamber of refrigerator to make sure that it icing absolutely.
- b) Ice crystal put the ICE BOX in the water tank.
- c) There have two ICE BOX, can use circularly. Place the water tank and turn the flange to fix the water tank in its place.

## CLEANING AND MANTENANCE

### 1. Clean the air filter screen

Unplug the power plug, push the flanges of the air filter screen up, remove it from appliance. Clean the air filter screen with neutral detergent and banister brush. Then clean it with clear water and reinstall to appliance.

### 2. Clean the wetted pad

Unplug the power plug, take down the air filter screen, then draw the wetted pad from support. Clean the wetted pad with neutral detergent and banister brush. Then clean it with clear water and reinstall to the appliance.

Attention: the wetted pad must be installed flatly, in order to avoid leaking.

### 3. Clean the water tank

Unplug the power plug, turn the flange and draw out 1/2 the tank. To remove completely, turn the two flanges which hold the water pump, and you can remove totally. Clean it with neutral detergent and rinse with water. Once dry, place it again, putting the water pump as it was.

Note: if you need to clean the tank completely, you should unscrew the screw under the base, also should unscrew the screw of water pump inside the tank.

### 4. Clean the shell

Clean with neutral detergent and soft cloth.

Attention: unplug the power plug when clean the appliance, since there have high pressure in the body. Do not leave any water on the control panel.

Attention: Must unplug the power plug when cleaning. Don't make the water into the control panel.

## MALFUNCTION AND MAINTENANCE

Malfunction	Possible reasons	Solution
No action	Power off or poor connection	<ul style="list-style-type: none"> <li>• Plug the power cord and make sure it connects well.</li> </ul>
Poor result of dedusting	<ul style="list-style-type: none"> <li>• Block the air filter screen with dust.</li> <li>• Block the air inlet with corpus alien.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove and clean the air filter screen.</li> <li>• Remove corpus alien from the air inlet.</li> </ul>

### DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

### DECLARATION OF CONFORMITY:

This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.

## GUARANTEE

This appliance is covered and is entitled to the legal guarantee in accordance with the legislation in force from the date of purchase. Keep the purchase receipt to be able to claim your right to the guarantee. To find the closest service to your location, contact through the following web link: <https://orbegozo.com/asistencia-tecnica/>

For any type of query, doubt or incident, you can contact us through our email shown on the main page of this manual or through our technical assistance service at <https://orbegozo.com/contacto/>

Orbegozo is not responsible for components and accessories that are subject to wear and tear due to use, as well as perishable compounds or those that have deteriorated due to improper use. Nor will it be held responsible if the owner has technically modified the device. Check the legal conditions on our website.