

Repare el dispositivo ante las siguientes situaciones:

1. Funcionamiento irregular o sin funcionamiento.
2. Funcionamiento irregular desde la entrada de agua o por cuerpo extraño.



Eliminación del electrodoméstico viejo.

En base a la Norma europea 2002/96/CE de Residuos de aparatos Eléctricos y Electrónicos (RAEE), los electrodomésticos viejos no pueden ser arrojados en los contenedores municipales habituales; tienen que ser recogidos selectivamente para optimizar la recuperación y reciclado de los componentes y materiales que los constituyen, y reducir el impacto en la salud humana y el medioambiente. El símbolo del cubo de basura tachado se marca sobre todos los productos para recordar al consumidor la obligación de separarlos para la recogida selectiva.

El consumidor debe contactar con la autoridad local o con el vendedor para informarse en relación a la correcta eliminación de su electrodoméstico viejo.

DECLARACIÓN DE CONFORMIDAD: Este dispositivo cumple con los requisitos de la Directiva de Baja Tensión 2014/35/EU y los requisitos de la directiva de Compatibilidad Electromagnética 2014/30/EU.

Dear Customer, If you follow the recommendations contained in this Instruction Manual, our appliance will give you constant high performance and will remain efficient for many years to come. Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

SAFETY INSTRUCTIONS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent in order to avoid hazards.
6. Never pull on the cord when unplugging.
7. Do not use the unit with a damaged cord or plug, or if it is not working properly.

8. Do not handle the appliance with wet hands.
 9. Never immerse the appliance in water or any other liquid.
 10. Make sure the appliance has been unplugged before cleaning.
 11. This appliance must be installed following the national regulations for electrical installations.
 12. This appliance is for household use only.
 13. In case that you need a copy of the instruction manual, you can ask for it writing an email to sonifer@sonifer.es
 14. **WARNING:** In case of misuse, there is a risk of possible injury.
- Never insert fingers, pencils or any other object through the grille when fan is running.
 - Disconnect the plug when moving from one location to another.
 - Disconnect plug when removing guards for cleaning.
 - Be sure fan is on a stable, even surface when operating to avoid overturning.
 - **DO NOT** use fan in window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has been collected to avoid the potential of electrical hazard.

- Do not operate this product near an open fire, it may ignite and cause fire, resulting in body injury or property damage.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Never attempt to disassemble or alter the product in any way not instructed by this manual. Shock, fire, or bodily injury may occur.
- Do not cover or restrict airflow to the inlet or exhaust grills in any manner as the appliance may over heat and become a fire risk.
- Keep all objects at least 1.5 meter from the front, sides and rear of the appliance.

FUNCTIONS



1. Refrigeration / Humidification: This appliance can be used as humidifier, used with the ice boxes, this appliance can refresh the ambience.
2. Electronic control: safe durable.
3. Adjustable speed: have three speed, low, medium, high.
4. Operating modes: normal, breeze (the speed changes from high to low automatically) and night (the speed changes from high to low and it stops sometimes for helping to sleep).
5. Humidifier function: this function humidifies the ambient.
6. Swing function: the inner slats swing automatically, deliver wind at wide angle flatly. Also swing the outer slats transversely by your hands, choose the wind direction up and down.
7. Remote control: to use the appliance in distance.
8. Removable air filter and cooling pad: easy to clean, can use soft brush and detergent.


ASSEMBLING

1. Open the package and take out the air cooler .
2. Draw out the water tank 1/2, pour clean water into the tank.
 - Please pay attention to the water lever., Pour into the water over min level but no more than max Level.
f To en-have the cooling effect, you can put the ice box into the tank (after some hours in freezer).


Attention: cut the power when you pour the water into the tank.


OPERATION

Plug in first. It will light  on display while the appliance is in standby. Turn on the appliance pressing the button  default it works on middle speed and normal mode. Press again to standby the appliance.


1. Speed key : press this key and the speed changes serially (middle, high and low):





2. Mode button : default the appliance works in normal mode. Press button to change to breeze mode and again to change to night mode. If you press it by third time it will changes to normal mode.

3. Swing key : press this key and the wind direction can swing flatly, and the swing indicator light is on. It cancels this function when you press again. You can change the vertical direction wind by moving the outer slats handly.


4. Timer button : press this key for timer from 0 to 8 hours, each pressing 1 hour.

5. Cooling button : press this button to conect cooling function. Place the ice box (after be in freezer) in water tank so the air will be cooler. Press this button again to stop this function.

6. Humidifier button : press it to conect the humidification function, in this mode the appliance only works in speed 1.

7. Ionizer button : press this button to connect ionizer function and keep the fresh air. Press it again to stop this function.

TOUCH CONTROL PANEL AND DISPLAY

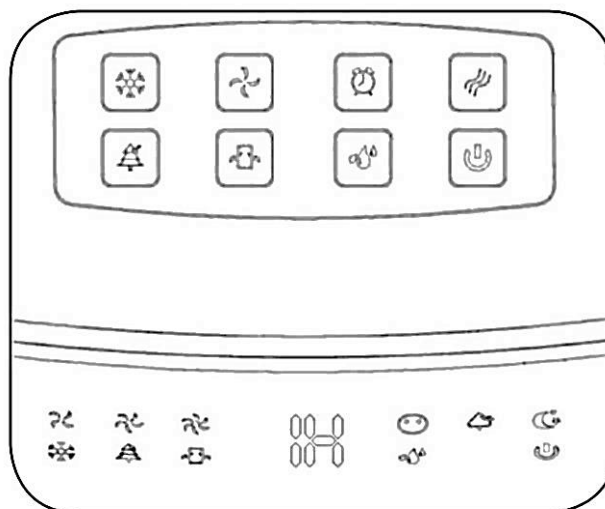

USING OF REMOTE CONTROL



It has the same function as touch control panel.

THE USE OF ICE BOX

The ice crystal has a particular feature of keeping cool, it can absorb heat from water and let the water temperature in the water tank below environmental temperature, so the air will be much cooler.

Using methods:

- a) Add water to the ICE BOX under not full situation and put it into the refrigerating chamber of refrigerator to make sure that it is icing absolutely.
- b) Ice crystal put the ICE BOX in the water tank.
- c) There are two ICE BOX, can use circularly.

CLEANING AND MAINTENANCE

1. Clean the air filter screen

Unplug the power plug, remove the upper screws of the filter to remove the air filter. Clean the air filter screen with neutral detergent and banister brush. Then clean it with clear water and reinstall to appliance.

2. Clean the wetted pad

Unplug the power plug, take down the air filter screen (following the same instruction as last point), then draw the wetted pad from support. Clean the wetted pad with neutral detergent and banister brush. Then clean it with clear water and reinstall to the appliance.

Attention: the wetted pad must be installed flatly, in order to avoid leaking.

3. Clean the water tank

Unplug the power plug, draw out 1/2 the tank and use soft brush clean it. Use neutral detergent and soft cloth rub inside of the tank.

Note: if you need to clean the tank completely, you should release the water pump by turning the two clips that hold it.

4. Clean the shell

Clean with neutral detergent and soft cloth.

Attention: unplug the power plug when clean the appliance. Do not leave any water on the control panel.

MALFUNCTION AND MAINTENANCE

Malfunction	Possible reasons	Solution
No action	Power off or poor connection	<ul style="list-style-type: none"> • Plug the power cord and make sure it connects well.
Poor result of dedusting	<ul style="list-style-type: none"> • Block the air filter screen with dust. • Block the air inlet with corpus alien. 	<ul style="list-style-type: none"> • Remove and clean the air filter screen. • Remove corpus alien from the air inlet.

Repair the appliance under the situation as follows:

1. Abnormal action or no action.
2. Abnormal action since ingress of water or corpus alienum.



Disposal of old electrical appliances.

The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY: This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.