

SAFETY PRECAUTIONS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
6. Never pull on the cord when unplugging.
7. Do not use the unit with a damaged cord or plug, or if it is not working properly.

8. Do not handle the appliance with wet hands.
9. Never immerse the appliance in water or any other liquid.
10. Make sure the appliance has been unplugged before cleaning.
11. This appliance must be installed following the national regulations for electrical installations.
12. This appliance is for household use only .
13. In case that you need a copy of the instruction manual, you can find it in www.orbegozo.com.
14. **WARNING:** In case of misuse, there is a risk of possible injury.

Specific safeguards

- Never insert fingers, pencils or any other object through the grille when fan is running.
- Disconnect the plug when moving from one location to another.
- Disconnect plug when removing grilles for cleaning.
- Be sure fan is on a stable, even surface when operating to avoid overturning.

- DO NOT use fan in window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has been collected to avoid the potential of electrical hazard.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately.
- To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be

 
 
replaced only by the manufacturer or by our customer service.

- Use only original spare parts.

ASSEMBLY


Fitting the pedestal

- Insert firmly the stand bar in the round base,
- Screw the stand bar to the base. Insert the screw and the washer under the round base and screw it firmly.
- Extract the telescopic tube until the height desired. Adjust spinning the thread
- Install the fan's body over the stand bar and tighten the screws

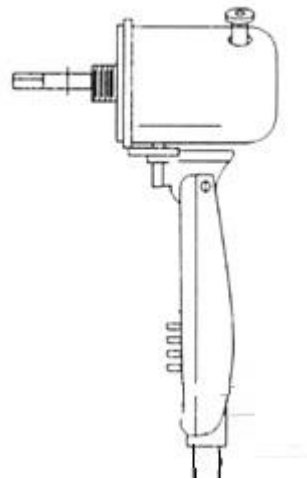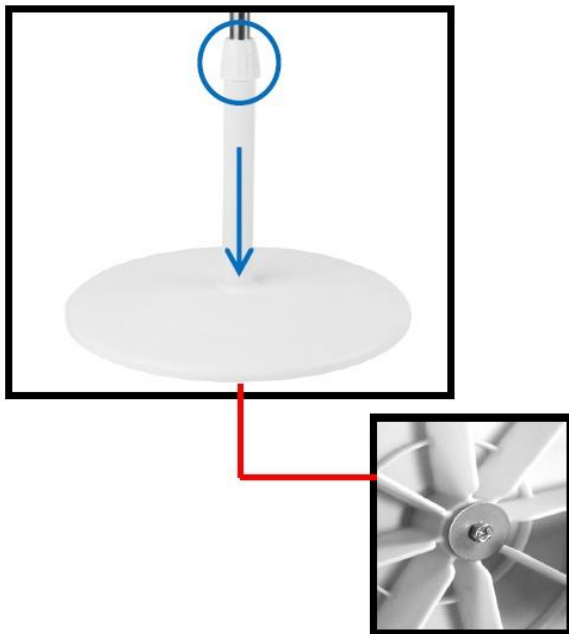


Assemble the guard cover and protective ring

 - Put the rear grille in the motor with the fasten nut. The handle should keep in the upper part.
- Put the protective ring which will fix both grille

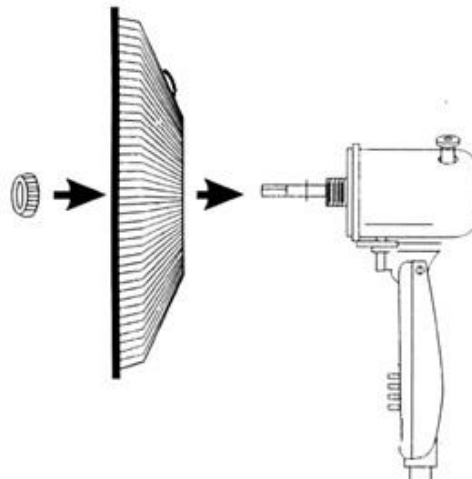


Install fan blade

 - Place the fan blades onto the motor spindle, making sure that the slot on the blade assembly lines up with the key on the motor spindle. Then tighten the fixing nut of fan blade anticlockwise.

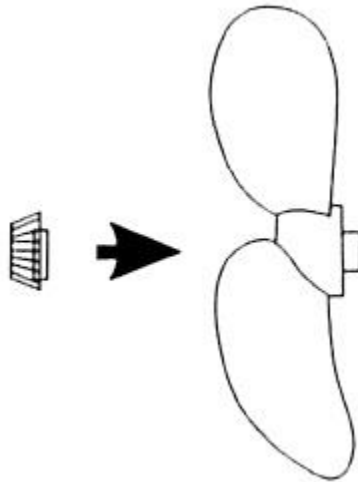
**Assemble front cover**

 - Insert the circle of front cover into the groove of shroud ring, which has been fixed to the back cover.
- Finally fasten the bolts into screw of the joint of shroud ring.

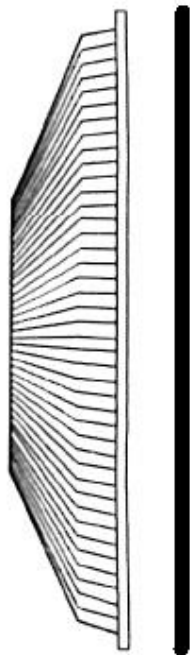

SWIVEL JOINT

 - The fan can be tilted vertically. Adjust the tilt setting by using the fan tilt adjustment screw (A)
- The appliance can also oscillate horizontally. You can use the buttons or the remote control

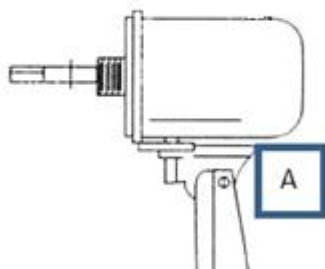

USE



- Turn on the fan with the ON / SPEED button
- Turn off the fan with the OFF button
- With the TIMER button you can set the timer up to 6 hours
- With the SWING button you can control the oscillation of the fan.

Use of the remote control: With the remote control you can turn the fan on / off, select one of the three speeds and choose between COMFORT, SLEEP or NATURE mode.

Also, you can set the timer up to 6 hours.

SOLUTION TO SIMPLE FAILURE

When starting the fan, the fan blade doesn't work. Please check whether the power plug has really inserted into the socket or the cover has distorted, which has touched the fan blade. If sound the noise when starting the fan, please check the unit as follows:

- (1) Fan blade has been tight installed into the output shaft of motor.
- (2) Groove on back of cover has matched the inserting groove on the output shaft.
- (3) There are tiny defective edge ring existing around the fan blade.
- (4) The cover has distorted, which has touched the fan blade.

MAINTAINING

- Be sure to switch off the power supply and pull out the plug before cleaning.
- This machine only needs common external cleaning and wiping.
- Place into casing and store in the dry position.

TECHNICAL PARAMETERS

Model	Voltage	Power	Frequency
SF 0249	220-240 V	60 W	50 Hz

Disposal of old electrical appliances.



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY: This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.