

GENERAL SAFETY INFORMATION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
6. Never pull on the cord when unplugging.



7. Do not use the unit with a damaged cord or plug, or if it is not working properly.
 8. Do not handle the appliance with wet hands.
 9. Never immerse the appliance in water or any other liquid.
 10. Make sure the appliance has been unplugged before cleaning.
 11. This appliance must be installed following the national regulations for electrical installations.
 12. This appliance is for household use only.
 13. In case that you need a copy of the instruction manual, you can find it www.orbegozo.com
 14. WARNING: In case of misuse, there is a risk of possible injury.
- Make certain that the power source conforms to the electrical requirements of the Fan.
 - Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
 - This Fan must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres.
 - Where possible, avoid the use of extension cords. I minimize the risk of overheating by ensuring that they are UL listed. Never use a single extension cord to

operate more than one Fan.

- Do not block or manipulate the fan while it is working.
- Locate the Power Cord so the Fan or other objects are not resting on it. Do not run Power Cord under carpeting. Do not cover Power Cord with throw rugs, runners, or the like. Arrange Power Cord away from room traffic and where it will not be tripped over.
- This Fan is not intended for use in wet or damp locations. Never locate a Fan where it may fall into a bathtub or other water container.
- Do not use Fan outdoors.
- Never insert fingers, pencils or any other object through the grille when fan is running.
- Disconnect the plug when moving from one location to another.
- Disconnect plug when cleaning grills.
- Be sure fan is on a stable, even surface when operating to avoid overturning.
- DO NOT USE fan in window. Rain may create an electrical hazard. Do not leave the fan operating adjacent to an area where water has been collected to avoid the potential of electrical hazard.


ASSEMBLY INSTRUCTIONS

- 1. Base assembly:** Join the left base and the right base to form a single circular piece

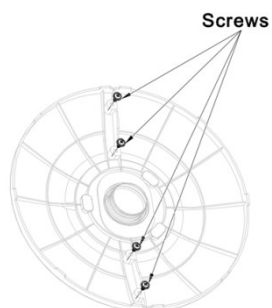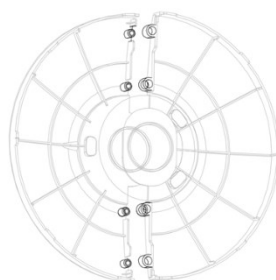

- 2. Base attachment:** Align the screw holes on both sides of the chassis (left and right) and secure them firmly with the screws provided.

- 3. Removing the nut:** Remove the plastic fixing nut located at the bottom of the fan body

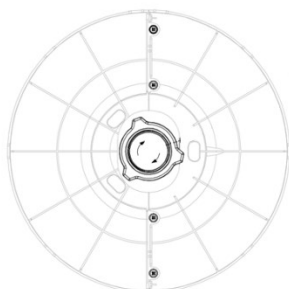

- 4. Attaching the base to the fan:** Place the fan body onto the assembled base. Use the plastic nut, turning it clockwise **to** securely attach the base to the fan body.

INSTRUCTIONS FOR USE

Important: This appliance is for domestic use and must be connected exclusively to a 230V AC power outlet . Do not use any other type of electrical outlet.


To turn on the fan, turn the speed selector to the **left** :

- 1 (low), 2 (medium) and 3 (high)

To turn it off, turn the speed selector to position 0.

To turn on the fan with oscillation function, turn the selector to the **right** :

- 1 (low), 2 (medium) and 3 (high).

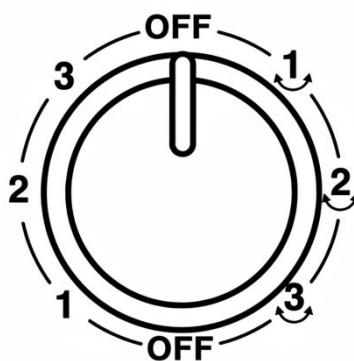

CARE AND CLEANING

This appliance requires minimal maintenance and **contains no user-serviceable parts** . Do not attempt to repair it yourself; contact qualified service personnel if necessary. The fan is permanently lubricated and will not require additional lubrication during its service life.

Cleaning

- **Safety:** Before cleaning, turn off the fan and unplug it from the electrical outlet.
- **Dust:** Wipe off excess dust with a lint-free cloth.
- **Engine:** To ensure proper airflow to the engine, keep the rear vents free of dust. You can use a **vacuum cleaner nozzle** to clean these vents.
- **Warning:** Do not immerse the fan in water or any other liquid.

Storage

- Make sure to disassemble and clean the fan before storing it.
- It is recommended to use the **original packaging** for storage.
- Always store the equipment in a dry place.
- **Important:** Never store the fan while it is plugged in. Do not wrap the cord tightly around the appliance or pull it taut at the point where it enters the housing, as this could fray or break the cord.

TECHNICAL SPECIFICATIONS

Power (W)	Voltage and Frequency
45W	220-240V~ 50-60Hz



DISPOSAL OF OLD ELECTRICAL APPLIANCES

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY:

This device complies with the requirements of the Low Voltage Directive 2014/35/EU, the requirements of the Electromagnetic Compatibility Directive 2014/30/EU and the requirements of the Restriction of Certain Hazardous Substances Directive (EU) 2015/863 amending 2011/65/EU.

GUARANTEE

This appliance is covered and is entitled to the legal guarantee in accordance with the legislation in force from the date of purchase. Keep the purchase receipt to be able to claim your right to the guarantee. To find the closest service to your location, contact through the following web link: <https://orbegozo.com/asistencia-tecnica/>

For any type of query, doubt or incident, you can contact us through our email shown on the main page of this manual or through our technical assistance service at <https://orbegozo.com/contacto/>

Orbegozo is not responsible for components and accessories that are subject to wear and tear due to use, as well as perishable compounds or those that have deteriorated due to improper use. Nor will it be held responsible if the owner has technically modified the device. Check the legal conditions on our website.